



CARE AND MAINTENANCE OF YOUR GARAGE DOOR.

1. LUBRICATE MOVING PARTS (HINGES, ROLLERS, SPRING AND AUTOMATIC POLE/CHAIN) WITH A DRY LUBRICANT.

2. TO PROLONG DOOR LIFE, WASH EXTERIOR OF DOOR PANELS WITH SOAPY WATER AND A CAR BRUSH EVERY 3 MONTHS (MORE FREQUENTLY IN CORROSIVE AREAS). N.B. THE WARRANTY ON THIS DOOR WILL BECOME INVALID IF DOOR NOT WASHED REGULARLY.

3. ALL CEDAR DOORS MUST BE SEALED INSIDE AND OUT WITH A PENETRATING OIL STAIN ON A REGULAR BASIS. IF DARK COLOURS ARE USED RESULTING IN TIMBER MOVEMENT OR CRACKING THIS IS NOT COVERED UNDER THE WARRANTY.

4. MANY PARTS OF THE DOOR ARE UNDER EXTREME LOAD HENCE ONLY EXPERIENCED GARAGE DOOR INSTALLERS SHOULD MAKE ANY ADJUSTMENTS. CONSULT YOUR LOCAL AGENT IF REQUIRED.

5. TO OPERATE DOOR MANUALLY, PULL RED CORD TO RELEASE THE DOOR FROM THE AUTOMATIC DRIVE, DO NOT USE THE RED CORD TO OPEN AND CLOSE DOOR.

WHEN OPERATING DOOR MANUALLY BE EXTREMELY CAREFUL WHEN PULLING DOOR DOWN. DO NOT PUT FINGERS BETWEEN DOOR PANELS.



DATE INSTALLED: _____ JOB# _____

INSTALLED BY: _____